

**FREESTANDING SOLID FUEL BURNER:  
“FLUE MOUNTED SHIELD” ASSEMBLY**



**N.B. Only a Yunca brand flue mounted shield is to be fitted to Yunca fires.**

**Not all models must use every piece in this kit. Please refer to the installation instructions that were supplied with your fire (also refer to the table below - Fig 2).**

You may clean stainless steel flue to prevent unsightly marks. Do this prior to fitting the flue guard, and prior to the first fire. Clean with a metal polish, and buff off (a little meths on a rag is ok). The flue will eventually go a golden coppery colour.

<b>Contents:</b>	12 x attachment screws
1 x 1200mm lined back guard	1 x 900mm adjustable extension.
1 x 1200mm perforated front guard	1 x 1200mm tertiary back guard with spacer tags.
1 x top deflector shield (angled when installed)	2 x attaching straps



N.B. Accessory (extension) flue mounted shields are available in 1200mm lengths.

**ASSEMBLY PROCEDURE.** Before fitting to the flue pipe attach any additional backing sheets as required per the installation instructions supplied with the fire (also see table below – Fig 2).

**1). 900mm adjustable extension:** Fit this first (if required, see table below) using two screws to attach to the **lined back guard**. The length of this extension will depend on ceiling height, a series of holes are drilled to allow the correct height. A gap of 65mm (maximum) is required between the top of the extension and the ceiling tile.

**2). 1200mm tertiary back guard:** (Fig 1). Place the 1200mm lined back guard face down. Bend the spacer tags on the tertiary guard to shape (see Fig 1 below - there will be two 90 degree bends in the tags). Attach the Tertiary guard as shown, using four screws. Check the gap is constant between the tertiary guard and the back of the lined flue guard.

**FIG 1. – Fitting the tertiary back guard (if required).**

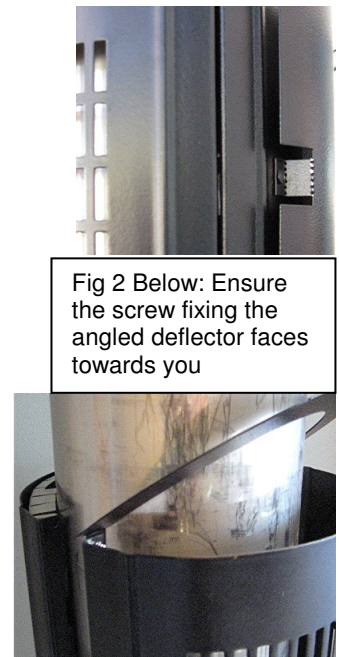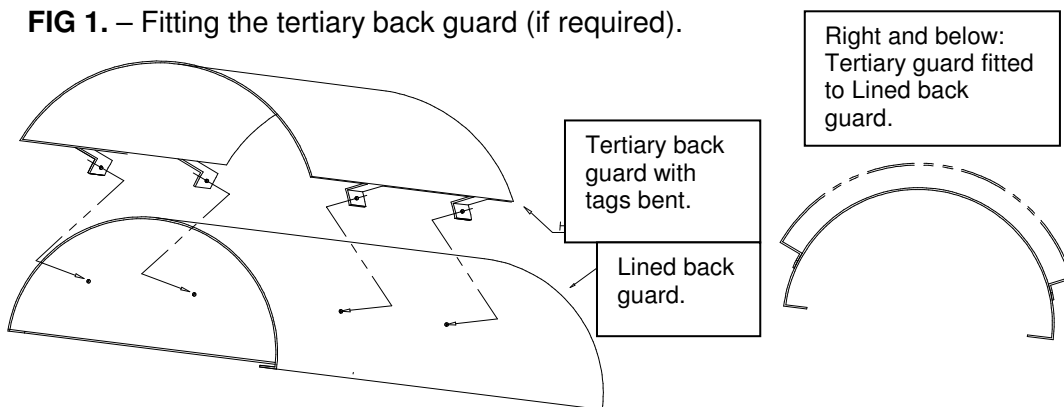

**3). Attach to the flue** using both straps by screwing one side of the strap to the lined back guard and bending the straps around the front of the flue pipe. Then secure the other side.

**4).** If required, attach the angled top front deflector (Fig 2, right). Slightly bend the tabs and then screw the deflector on to the top of the perforated front cover (make sure the pointed end of the screw faces towards you, or the front cover will not attach properly).

**5).** The perforated front section can then be attached using the clips on the lined back guard. If it is fitted, the deflector is bent to adjust the angle to 30 degrees.

**FIG 3 - FLUE MOUNTED SHIELD COMPONENTS (SEPTEMBER 2010)**

MODEL	PERF FRONT	LINED BACK 1200	EXTN 900	TERTIARY BACKING	(ANGLED) TOP DEFLECTOR
WEGJ 2000	✓	✓	optional	✓	✓
HOBSON FITZROY BLENZ	✓	✓	✓	✓	✓

For other models not listed, please refer to that model's installation instructions.